



2

**RIGHT SIDE** 

L = 80 mm

NOT IIN THIS SET

M10, I = 90 mm


M10

d =20mm, t=15mm

M10, I = 80 mm

M10

5

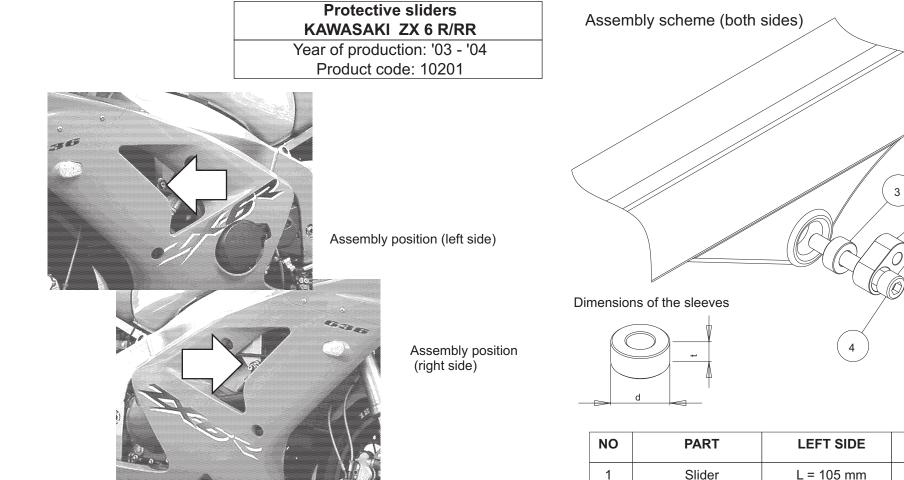

2

3

4

5

6

Steel bar

Sleeve

Screw

Screw

Washer

## Assembly instructions

1. Remove the screws indicated with the arrows.

Replace the removed screws with the new screws (parts #4), aluminium sleeve (part #3 - only on the left side) and metal bars (parts #2) according to the attached drawing. Put the metal bars (parts #2) in the right positions according to the drawing.
Assemble the sliders and the screws according to the drawing (parts #1, #5, #6).
Assemble the screws #5 and the sliders with the metal bars #2.

We suggest to use the threadlocker to make sure that the screws do not get loose.

This product is entirely produced in the European Union. This product is a professional accessory to be used on the race track. Renner LTD takes no responsibility for any damages occurred despite of using protective accessories. For more information go to www.renner-moto.com