


Protective Sliders (Crash Pads)

KAWASAKI ER 6 N

Year of Production: '12-

Product Code: 10222

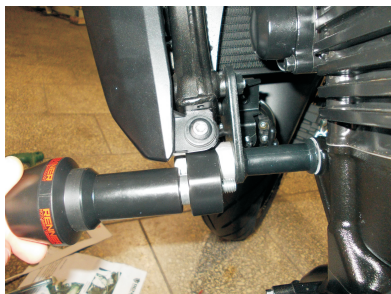

Assembly position (left side)




Assembly position (right side)

Assembly instructions

1. Remove the screws indicated with the arrows.
2. Replace the removed screws with the new screws (part #7), aluminium sleeves (part #4) and metal bars (parts #3) according to the attached drawing. Put the metal bars (parts #3) in the right positions according to the drawing.
3. Assemble the sliders and the screws according to the drawing (parts #1, #2, #5, #6).
4. Assemble the screws #5 and the sliders with the metal bars #3.

We suggest to use the threadlocker to make sure that the screws do not get loose.

This product is entirely produced in the European Union. This product is a professional accessory to be used on the race track. Renner LTD takes no responsibility for any damages occurred despite of using protective accessories. For more information go to www.renner-moto.com

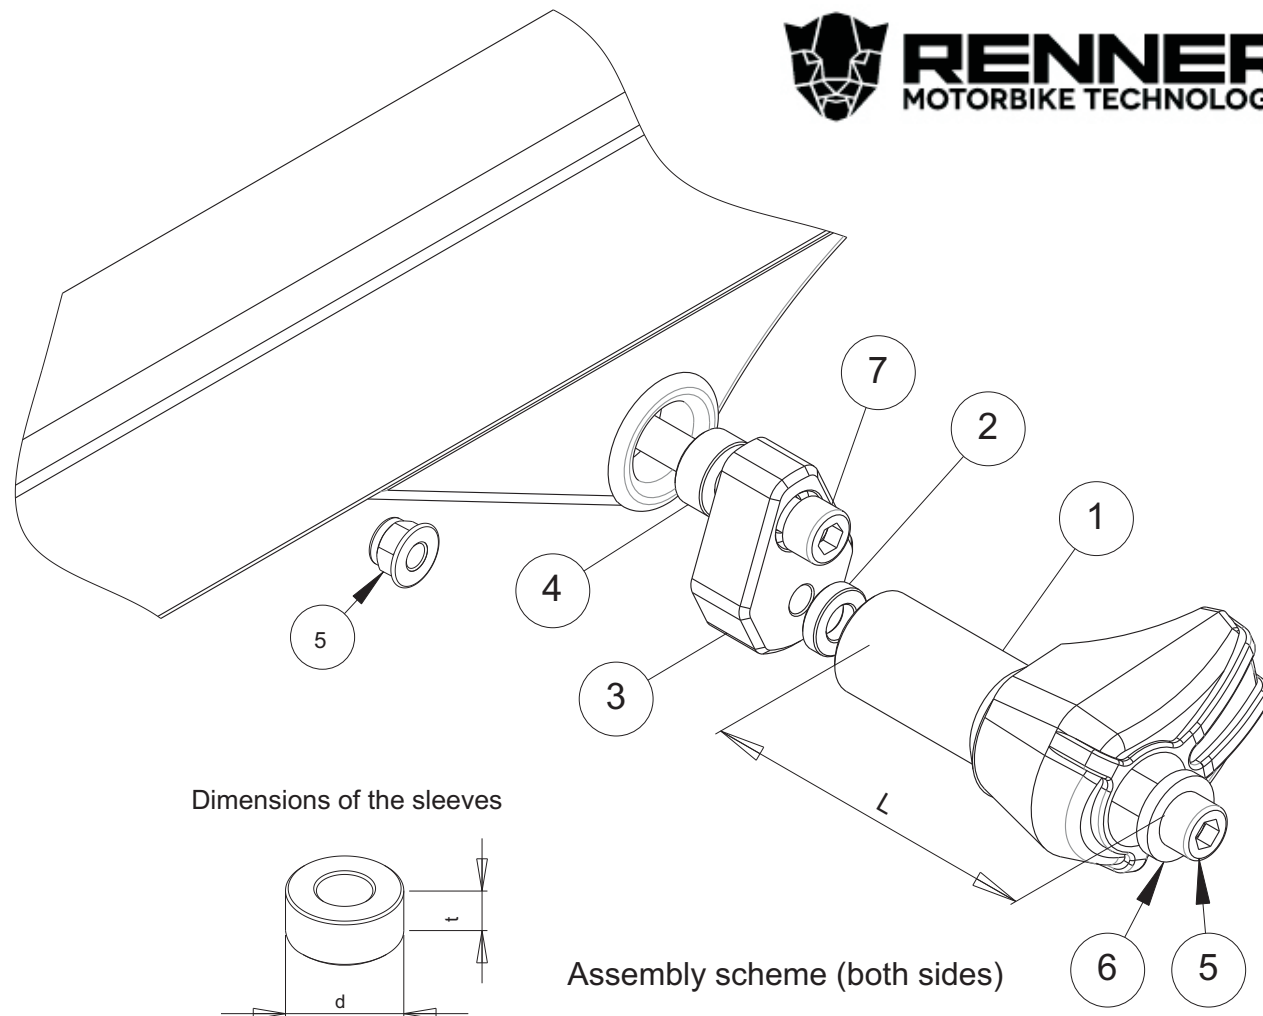

Dimensions of the sleeves

Assembly scheme (both sides)

No	Part	Left Side	Right Side
1	Slider	L = 105 mm	L = 105 mm
2	Sleeve	d=20 mm, t=5 mm	d=20 mm, t=5 mm
3	Bar		
4	Sleeve	d=30 mm, t=12 mm	d=22 mm, t=5 mm
5	Screw	M10	M10
6	Washer		
7	Main Screw	M10, 130 mm	M10, 130 mm