


Protective sliders
SUZUKI GSF 650/1250 Bandit

Year of production: '07 -
 Product code: 10318

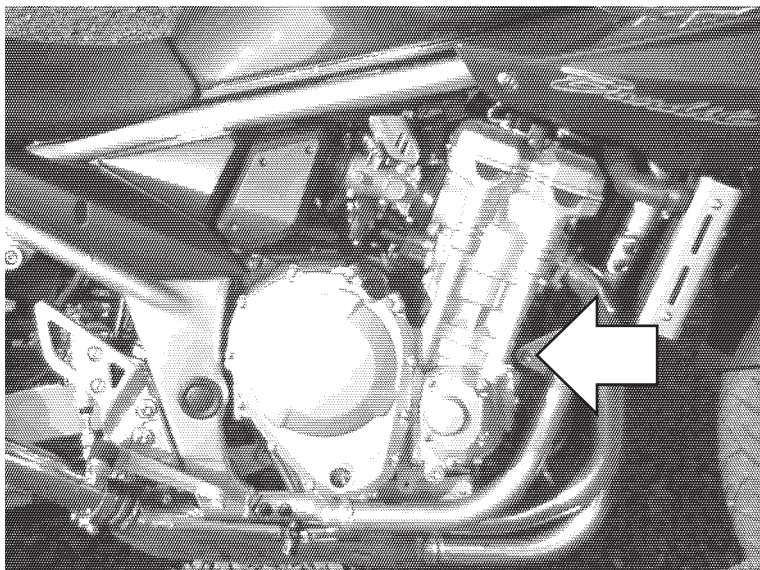


Assembly position
 (both sides)

Assembly instructions

1. Remove the screw indicated with the arrow.
2. Replace the removed screw with the stud (part #5), nuts (part #6), aluminium sleeves (parts #4) and metal bars (parts #3) according to the attached drawing. Put the metal bars (parts #3) in the right positions according to the drawing.
3. Assemble the sliders and the screws according to the drawing (parts #1, #2, #7, #8).
4. Assemble the screws #8 and the sliders with the metal bars #3.

We suggest to use the threadlocker to make sure that the screws do not get loose.

This product is entirely produced in the European Union. This product is a professional accessory to be used on the race track. Renner LTD takes no responsibility for any damages occurred despite of using protective accessories. For more information go to www.renner-moto.com

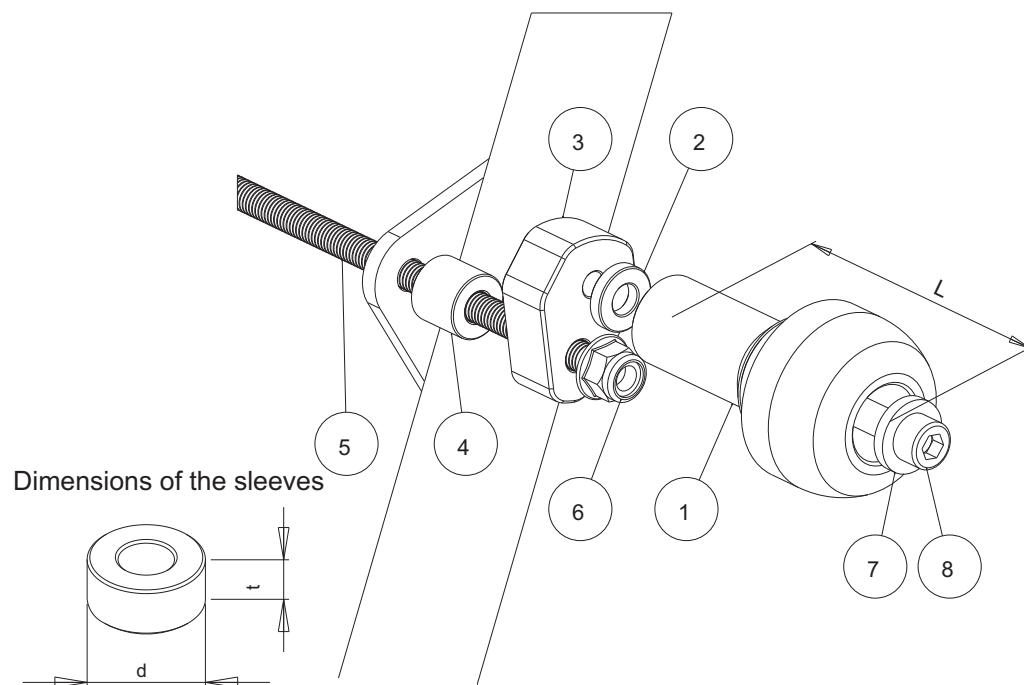

NO	PART	LEFT SIDE	RIGHT SIDE
1	Slider	L = 105 mm	L = 105 mm
2	Sleeve	d =20mm, t=5mm	d =20mm, t=5mm
3	Bar		
4	Sleeve	d=30 mm, t=60 mm	d=30 mm, t=30 mm
5	Stud	M10	-
6	Nut	M10	M10
7	Washer		
8	Screw	M10	M10