



RENNER MOTORBIKE TECHNOLOGY

Protective sliders SUZUKI GSX - R 600 / 750

Year of production: '01 - '03 / '00 - '03 Product code: 10311

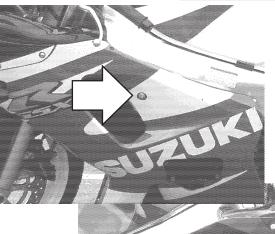

Assembly position (left side)

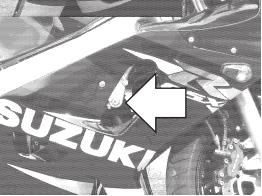


Assembly position (right side)

Assembly instructions

- 1. Remove the screws indicated with the arrows.
- 2. Cut the semicircular hole in the LEFT fairing. The nest of the original screw must be uncovered.
- 3. Replace the removed screws with the new screws (part #4), aluminium sleeve (part #3) and metal bars (parts #2) according to the attached drawing. Put the metal bars (parts #2) in the right positions according to the drawing.
- 4. Assemble the sliders and the screws according to the drawing (parts #1, #5, #6).
- 5. Assemble the screws #5 and the sliders with the metal bars #2.
- We suggest to use the threadlocker to make sure that the screws do not get loose.

This product is entirely produced in the European Union. This product is a professional accessory to be used on the race track. Renner LTD takes no responsibility for any damages occurred despite of using protective accessories. For more information go to www.renner-moto.com

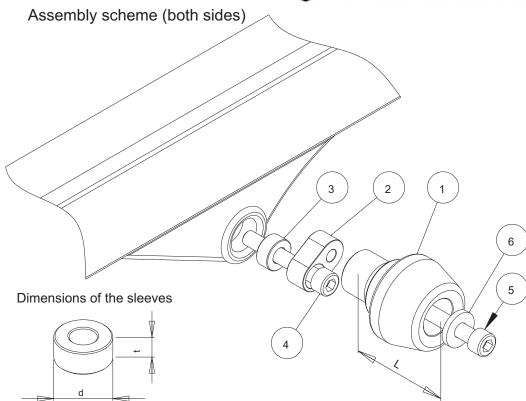

NO	PART	LEFT SIDE	RIGHT SIDE
1	Slider	L = 60 mm	L = 60 mm
2	Steel bar		
3	Sleeve	d =22mm, t=20mm	d =22mm, t=5mm
4	Screw	M10, I = 80 mm	M10, I = 50 mm
5	Screw	M10	M10
6	Washer		